

**US&R SHORING OPERATIONS GUIDE
CONSTRUCTING VERTICAL SHORING SYSTEMS**

The change shown on the following page should be made by simply using an ink pen to line through the “2x4 or” and add the correction “or 2-2x4” to the existing page, as shown.


This correction should be made on page 2-28 of the:
**US&R STRUCTURES SPECIALIST FOG, and the
US&R SHORING OPERATIONS GUIDE**

2

Correction for page 2-28, dated 8Mar10

**US&R SHORING OPERATIONS GUIDE
CONSTRUCTING VERTICAL SHORING SYSTEMS**

BRACING BETWEEN PAIRS of SLOPED FLOOR SHOES
(When shores are spaced 5'-0" o.c. maximum.)

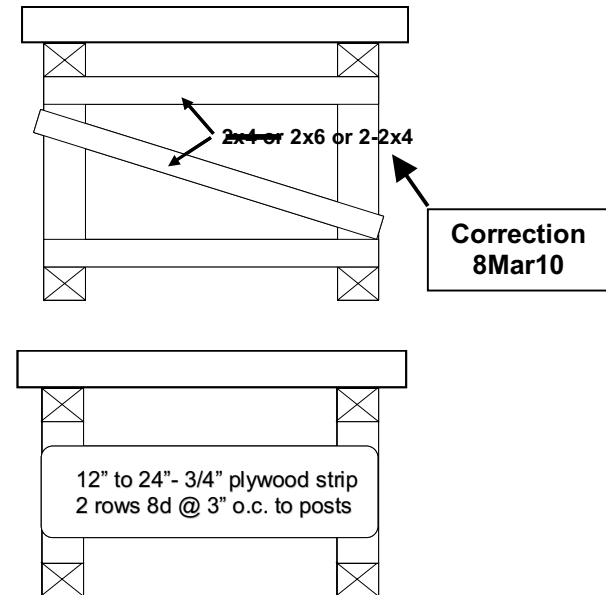

1. When Sloped Floor Shores are spaced a no more than 5'-0" o.c., brace the two sections together, same as in Laced Posts.
 - a. Do this at both posts to tie the two sections together.
 - b. You may use a wide piece of 3/4" plywood (12" to 24" wide) if shore height is 3ft or less. Nail plywood with 8d nails as shown.
 - c. The 2x6 horizontals and diagonal should be nailed each end with 5-16d. 2x4s may be nailed with 3-16d.